

Installation Instructions for Model CL-1000 Luminaire from The LED Company



The LED Company 17795 Sky Park Circle, Suite A. Irvine, CA 92614

Installation Instructions for Model CL-1000 Luminaire from The LED Company


- MIN 75°C SUPPLY CONDUCTORS / LES FILS D'ALIMENTATION 75°C MIN
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED / CE PRODUIT DOIT ÊTRE INSTALLÉE CONFORMÉMENT AU CODE D'INSTALLATION APPLICABLES PAR UNE PERSONNE FAMILIERE AVEC LA CONSTRUCTION ET L'EXPLOITATION DU PRODUIT ET LES RISQUES ENCOURUS
- SUITABLE FOR WET LOCATIONS / CONVIENT POUR DES ENDROITS HUMIDES
- CAUTION RISK OF FIRE AND RISK OF SHOCK, DO NOT OPEN THIS PRODUCT MUST BE SERVICED ONLY BY QUALIFIED PERSONNEL / ATTENTION - RISQUE DE FEU ET RISQUE DE CHOC, NE PAS OUVRIR - CE PRODUIT DOIT ETRE REPARE PAR UN PERSONNEL QUALIFIE
- AC ONLY SUPPLIED TO THE POWER SUPPLY / AC SEULEMENT FOURNI À L'ALIMENTATION
- 120-277Vac, 60Hz, 0.125 A max, 15.7W Class 2



The Model CL-1000 Luminaire from The LED Company is designed, and approved for mounting on walls, covered ceilings, and poles. Suitable for Dry, Damp, or Wet locations.

- 1. Ensure power is OFF prior to installation.
- 2. The end of the fixture mounting stem is threaded with ½ NPS-14 threads. Locknuts are provided with the fixture. One for mounting and a second for angle adjustment. Note: Silicone gasketing is already provided internally at the base of the stem.
- 3. Connect Live, Neutral and Ground wire from fixture to supply wires using appropriate listed/certified wire nuts suitable for the number and size of wires to be connected with voltage and current rating at least that of the Power Supply Input.
- 4. Ensure High Voltage wiring is done to satisfy requirements of all National and Local Codes.
- 5. Screw mounting stem to pre-existing threaded mounting point or use locknut (provided) and tighten securely, as required.
- 6. Loosen the pivot screw on the mounting stem and point luminaire in desired direction. Re-tighten pivot screw and tighten set screw (if desired).
- 7. Re-apply power (100 277VAC) and test.

Note: To change optics or for any maintenance, always enter fixture by unscrewing the front section

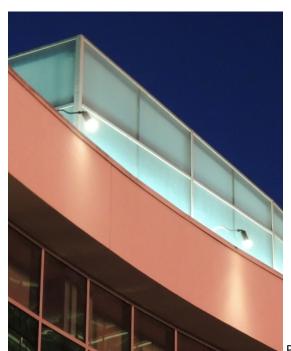

Phone: 949.645.2242 E-mail: sales@ledcohome.com